

SetTransmitState

Declaration

```
void (_stdcall * SetTransmitState)(HOBJ StID);
```

Parameters

StID	station ID
------	----------------------------

Description

Transition of a line into the status Transmission. The function should be used before transmission (call-back function [WriteToLine](#)), if the **Custom** mode of the line of [Serial](#) or [MOXA IP Serial Library](#) category is being used.



Related pages:

[D2000 KomAPI - call-back functions](#)