

Functions for Calculated Historical Values

Functions for calculated historical values

The following functions can be only used in the [statement](#) that determines the value of the object of [Historical value](#) type. The functions can be defined either directly by typing them or by selecting them from the list of functions. The [list of functions](#) is opened after clicking the button **Functions** in the configuration dialog box (the tab [Statement](#)) of objects of *Historical value* type.

- [%ARC_Derivation](#)
- [%ARC_GetValue](#)
- [%ARC_Nowrite](#)
- [%ARC_Unwrite](#)

⋮	Historical values - configuration dialog box
---	--