

DeletePoint

Declaration

```
unsigned int _stdcall DeletePoint(struct PointPar * Pt)
```

Parameters

Pt	Pointer to PointPar structure.
----	------------------------------------------------

Description

The function DeletePoint (_DeletePoint@4 in the *Stdcall* call convention) is optional. It is called if the I/O was deleted in the [D2000 CNF](#) process.

Return code

Code	Description
RQ_OK	Request has been executed OK.
RQ_ERR	An error occurred (the device does not communicate or is out of service, or there is another error).
RQ_IGNORED	The function was ignored and the station status is not changed.



Related pages:

[D2000 KomAPI - interface functions](#)