

HI_GetEnable

%HI_GetEnable, %HI_SetEnable functions

Function

The function **%HI_SetEnable** enables/disables the specified graphic object ([Control function](#)).

The function **%HI_GetEnable** detects whether the specified graphic object is enabled or not.

Declaration

```
%HI_SetEnable(
    INT in refId,
    BOOL in bEnable
)

BOOL %HI_GetEnable(
    INT in refId
)
```

Parameters

refId	Reference to graphic object (reference variable).
bEnable	@TRUE - enables the graphic object. @FALSE - disables the graphic object.

Note

The function also allows to disable / enable a tab of Windows control of [Tab control](#) type - the parameter *refId* determines the name of the reference variable of a tab.



Related pages:

- [Graphic object manipulation functions](#)
- [Function arguments - types](#)