

HI_GetCurrZoomX

%HI_GetCurrZoomX function

Function

The function finds out current zoom of picture on axis X.

Declaration

```
REAL %HI_GetCurrZoomX()
```

Parameters

No parameters.

Note

This function is available also in [%HIX_ version](#).

**Related pages:**

[Active picture manipulation function](#)
[Function arguments - type](#)