

HI_MouseWheelZoom

%HI_MouseWheelZoom function

Function

This function enables /disables to zoom an active picture by the mouse wheel. Zooming keeps the position of mouse in the picture. For this reason, in the window there can be displayed an area outside dimensions defined in D2000 GrEditor.

Declaration

```
%HI_MouseWheelZoom(  
    INT in _iStep  
)
```

Parameters

_iStep	0 - disables zoom with the mouse wheel. >0 - size of zoom in thousandths of picture size.
--------	--

Example

```
%HI_MouseWheelZoom( 50 )
```

Note

This function is available also in [%HIX_ version](#).



Related pages:

- [Active picture manipulation functions](#)
- [Picture local variables](#)
- [Function arguments - types](#)