

# Generic User Protocol

[Supported device types and versions](#)  
[Communication line configuration](#)  
[Communication station configuration](#)  
[I/O tag configuration](#)  
[Literature](#)  
[Changes and modifications](#)  
[Document revisions](#)

## Supported device types and versions

Generic User Protocol is intended to support an application-level implementation of simple and lightweight communication protocols directly in the [D2000 Event](#) process via an ESL script or Java code. It supports several types of lines including line-redundant and system-redundant ones. Data read from the communication are published into input I/O tags ([IN](#)) without waiting for any confirmation from the ESL script's side, therefore it is recommended to implement data handling via [Server Event](#) using the action [ON CHANGE](#), eventually by a trigger event with a [request queue](#) configured, eventually by enabling multiple executions of the script (action [ENABLE](#)) so that all the published data is handled even under heavier load.

## Communication line configuration

Category of communication line:

- [Serial](#), [Serial Line Redundant](#), [Serial System&Line Redundant](#)
- [SerialOverUDP Device Redundant](#), [SerialOverUDP Line Redundant](#), [SerialOverUDP System&Line Redundant](#)
- [MOXA IP Serial Library](#)
- [RFC2217 Client](#)
- [TCP/IP-TCP](#), [TCP/IP-TCP Redundant](#): it is possible to enter several IP addresses/symbolic names separated by commas or semicolons. Note: if a [TCP/IP-TCP](#) or [TCP/IP-TCP Redundant](#) line has all stations set to StOFF, the TCP connection will be closed. Thus it is possible to control TCP communication from the ESL script using a [STSTAT](#) tell command.
- [File I/O](#): reading from a file is supported (line by line or the entire file at once according to the [File Read Mode](#) protocol parameter. As an "Input file" parameter, a specific file (e.g. *C:\temp\input.txt*) or a mask (e.g. *C:\temp\\*.txt*) can be specified. As an "Archive" parameter, the following can be specified:
  - value **#DELETE#** - the input file is deleted after reading the data
  - directory name - the input file is moved to the specified directory after reading the data
  - empty value - the input file is not manipulated after reading the data

For both the "Input file" and "Archive" parameters, the symbolic constant **#APPDIR#** can be used to indicate the application directory (e.g. *"#APPDIR#\input.txt"*).

## Communication line protocol parameters

[Configuration line](#) dialog box - tab **Protocol parameters**.

They influence some of the optional protocol parameters. The following line parameters can be set:

Table 1

Keyword	Full name	Description	Unit	Default value
TS	TCP Server	Activates server mode on the <a href="#">TCP/IP-TCP</a> line. In this mode, the D2000 KOM process listens to the client connection. After the client is connected, the D2000 KOM process communicates with it (i.e., it is a single-server implementation handling a single client). After the client is disconnected, the D2000 KOM process listens again. In server mode, the entered server name is interpreted as the name/IP address of the interface on which the D2000 KOM process listens. It is also possible to enter symbolic names * resp. <i>ALL</i> (listening on all interfaces for <a href="#">IPv4</a> protocol), or [ * ] resp. <i>[ALL]</i> (listening on all <a href="#">IPv6</a> interfaces).	-	False

RT	Read Wait Timeout	Waiting between individual data readouts from the communication. If no data was received during this period and previously some data was read, it will be published as a value of input I/O tag <a href="#">IN</a> . If some data was received during this period, it will be appended to a buffer, until a timeout occurs or the buffer becomes full (see a parameter <a href="#">Read Size</a> ). If a parameter <a href="#">Log Each Read</a> is set to True, data will be published immediately regardless of the value of the parameter <a href="#">Read Wait Timeout</a> .	sec. mss	1.000
CE	Character encoding	The method for text encoding/decoding for writing/reading. Implemented are: <ul style="list-style-type: none"> <li>• UTF-8</li> <li>• ISO_8859_1</li> <li>• Windows_1250</li> <li>• Windows_1251</li> <li>• Windows_1252</li> <li>• KZ_1048</li> </ul> Note: ISO_8859_1 mode is suitable for the transmission of 8-bit ASCII characters and implementation of binary protocols. Note: if invalid data is read (e.g. for UTF-8 encoding), the input I/O tag will be invalidated.	-	ISO_8859_1
RS	Read Size	Maximum size (in bytes) of input data. Longer data will be published in several chunks.	-	1024
FRM	File Read Mode	Method of reading data from a file: <ul style="list-style-type: none"> <li>• Read one row - values are read and published to the input I/O tag (IN) one row at a time</li> <li>• Read whole file - the whole file is loaded and published to the input I/O tag (IN) at once</li> </ul>	-	Read one row
LE	Log Each Read	If this parameter is set to True, data will be published immediately regardless of the value of the parameter <a href="#">Read Wait Timeout</a> .	-	False
LF	Log Format	Format of data traces in log files: "0 - Hexa log" or "1 - Text log". Setting the correct format helps to make a communication log file more readable depending on whether the specific protocol is text-oriented or binary by dumping the data in text or hexadecimal format.	-	0 - Hexa log
SL	Single Log	Setting this parameter to True will make all logs to be written to a single file on redundant lines. Setting this parameter to False means that two log files will be created for the primary/secondary line ( <a href="#">Serial Line Redundant</a> , <a href="#">SerialOverUDP Line Redundant</a> , <a href="#">TCP/IP-TCP Redundant</a> ), or four log files will be created for the primary /secondary line of the A/B system ( <a href="#">Serial System&amp;Line Redundant</a> , <a href="#">SerialOverUDP System&amp;Line Redundant</a> ).	-	False

## Communication station configuration

- Communication protocol Generic User.
- The station address is not configured; it is recommended to configure a single station per line, but multiple stations are supported too. In this case, when data is received from the communication, it will be published via input I/O tags [IN](#) on all configured stations. Likewise, it will be possible to use output I/O tags [OUT](#) on any configured station.

## I/O tag configuration

Possible value types of I/O tag: **TextI**, **TextO**.

Input I/O tags:

- The input I/O tag has an address **IN**.  
Note: on redundant lines an I/O tag with address **IN** receives values read from any line (primary/secondary), eventually from any system (A/B).
- on line-redundant lines ([Serial Line Redundant](#), [SerialOverUDP Line Redundant](#), [TCP/IP-TCP Redundant](#)) it is possible to configure I/O tags with addresses **IN\_A** and **IN\_B** to distinguish inputs from primary/secondary line
- on system-redundant lines ([Serial System&Line Redundant](#), [SerialOverUDP System&Line Redundant](#)) it is possible to configure I/O tags with addresses **IN\_A**, **IN\_B**, **IN\_C**, **IN\_D** to distinguish inputs from primary/secondary line of system A/B

Output I/O tags:

- The output I/O tag has an address **OUT**.  
Note: on redundant lines values written to an I/O tag with address **OUT** are written to both lines (primary/secondary), eventually to both systems (A/B).
- on line-redundant lines ([Serial Line Redundant](#), [SerialOverUDP Line Redundant](#), [TCP/IP-TCP Redundant](#)) it is possible to configure I/O tags with addresses **OUT\_A** and **OUT\_B** to write data to primary/secondary line only
- on system-redundant lines ([Serial System&Line Redundant](#), [SerialOverUDP System&Line Redundant](#)) it is possible to configure I/O tags with addresses **OUT\_A**, **OUT\_B**, **OUT\_C**, **OUT\_D** to write data to primary/secondary line of system A/B only

**Note:** it is possible to configure and use an I/O tag with the address **IN** and I/O tags **IN\_A**, **IN\_B**, **IN\_C**, **IN\_D** on a single station at the same time.  
In a similar way, it is possible to configure and use an I/O tag with the address **OUT** and I/O tags **OUT\_A**, **OUT\_B**, **OUT\_C**, **OUT\_D** on a single station at the same time.

## Literature

---



### Blog

You can read blogs about Generic User Protocol:

- [Communication - Generic User Protocol](#)
- [Communication with the control panel of DINI ARGEO DFW06](#)

## Changes and modifications

---

-

## Document revisions

---

- Ver. 1.0 - October 15, 2015 - Creating the document.
- Ver. 1.1 - December 12, 2021 - Implementation of *TCP Server* and *Character Encoding* parameters.



### Related pages:

[Communication protocols](#)