

# NtV

## %NtV function

### Function

Function sets the defined occurrence time for the given expression value. Result is a value of the same type as the expression.

### Declaration

```
UNIVAL %NtV(  
    in Expression,  
    TIME in Time  
)
```

### Parameters

Expression	Optional expression.
Time	Value of Absolute time type, that determines the time of the value of the expression <i>Expression</i> .

### Example

```
%NtV(P.SpeedFilterSim_PB+5, U.UVAR_TA\TIM)
```



#### Related pages:

- [Implemented functions](#)
- [Function arguments - types](#)