


# Configuration of System Texts (Value Representation Methods)

## Configuration of system texts

Configuration of system texts is performed by means of the process [D2000 CNF](#).

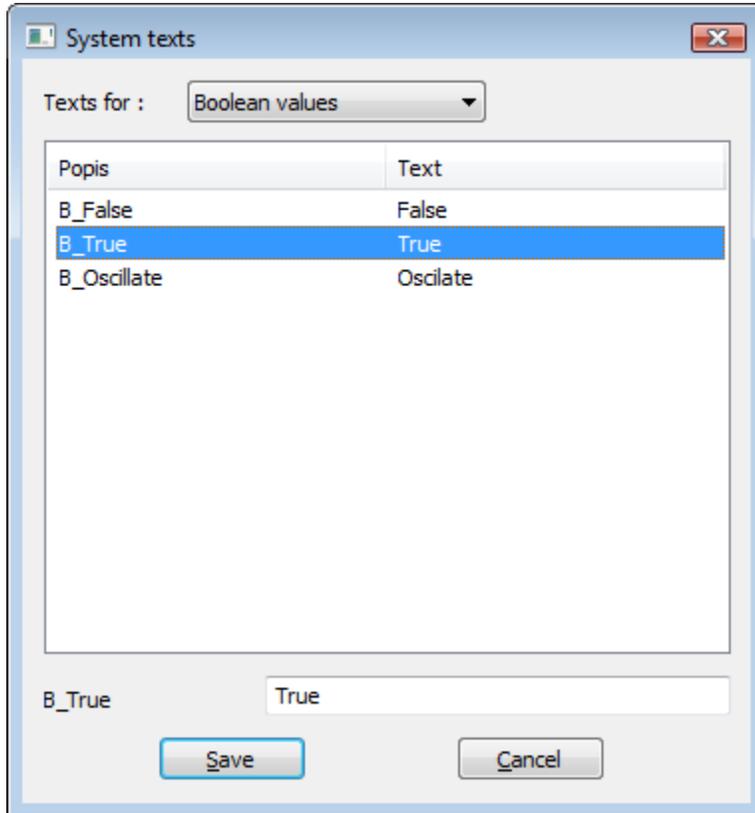

The system texts are divided into the following categories:

- [Boolean values](#) (for object of [Eval tag](#) type, [User variables](#), [Time channels](#))
- [Di, Do measured values](#) (for object of [I/O tag](#) type)
- [Process object values](#) (for object of [Process](#) type)
- [System alarm values](#) (for object of [Alarm](#) type)
- [Station values](#) (for object of [Station](#) type)
- [Qi measured values](#) (for object of [I/O tag](#) type)
- [Process alarms](#)
- [Value limits](#)
- [Value states](#)
- [Operator commands](#)
- [Alarm commands](#)

The objects, values of which do not contain system texts:

- I/O tags of AI, AO, CI, CO, TiA, ToA, TiR, ToR, TmRo, TxtI a TxtO types
- Evaluated tags
- User variables of Integer, Real, TmA, TmR, Txt types

\* Displaying of values of *Integer*, *Real*, *Absolute time* and *Time interval*/types might be controlled by [transformation palette](#).

## Boolean values

Label in the system	Predefined label	Cause
B_False	False	False value

B_True	True	True value
B_Oscillate	Oscilate	Oscillating value (TRUE <-> FALSE).

## Di, Do measured values

Label in the system	Predefined label	Cause
D_False	OFF	False value
D_True	ON	True value
D_Oscillate	OSCILATE	Oscillating value (TRUE <-> FALSE). The system sets the value as the oscillating one according to defined parameters of filtering - <a href="#">Oscillation limits</a> .

## Process object values

Label in the system	Predefined label	Cause>
P_Run	Run	The process is running.
P_Crash	Crash	The process is terminated by an error (incorrect termination). If it is possible, <a href="#">D2000 Server</a> will try to start the process again.
P_Stop	Stop	The process is correctly terminated.
P_WDErr	WDErr	Error when communicating with <a href="#">D2000 Server</a> - Watch Dog Error (interrupted flow of Watch Dog messages between the client process and <a href="#">D2000 Server</a> ).

## System alarm values

Label in the system	Predefined label	Cause
A_Norm	Normal	The condition to raise the alarm is not met.
A_Alarm	Alarm	The condition to raise the alarm is met.
A_Kvit	Kvit	The alarm is acknowledged by operator.
A_Block	Block	The alarm is blocked by operator, or at the alarm configuration is enabled <b>Blocked alarm</b> option.
A_UnBlock	UnBlock	The process <a href="#">D2000 Alarm</a> is not running and operator unblocks the given alarm in Blocked state.
A_NoKvit	NoKvit	The condition to finish the acknowledge-required alarm is met before its acknowledgement.

## Station values

Label in the system	Predefined label	Cause
St_On	ON	The station communicates
St_Off	OFF	The station does not communicate. The communication is disabled by operator (via the control window in process <a href="#">D2000 HI</a> ) or at the station configuration in the process <a href="#">D2000 CNF</a> .
St_Comm Err	COMERR	The occurrence of a "soft" error of the communication. Such error is occurred after an unsuccessful data transmission.
St_HardErr	HARDERR	The occurrence of "hard" error of the communication. Such error is occurred, if the communication with station is in StCOMERR state within the period given by <b>Time filter</b> parameter. If the station value is StHARDERR, then all the I/O tags of the station will pass to undefined state.
St_Simul	SIMUL	Communication with the station is simulated.
St_Wait	WAIT	The station is in AUTO mode. Communication is stopped. The control object value is TRUE. Requests for output are postponed and they will be executed when the control object value will be FALSE.

## Qi measured values

Label in the system	Predefined label	Cause
SwTrans	TRANS	Change of quadrature value from TRUE into FALSE or vice-versa.
SwOff	OFF	False value
SwOn	ON	True value
SwErr	ERROR	Invalid (illegal) value.
SwOsc	OSCILLATE	Oscillating value (TRUE <-> FALSE). The system sets a value as the oscillating one according to defined parameters of filtering - <a href="#">Oscillation limits</a> .

## Process alarms

Label in the system	Predefined label	Cause
NoAlarm	NoAlarm	No process alarm is active
ToTrue	ToOn	Process alarm occurred - change into ON (TRUE) level.
ToFalse	ToOff	Process alarm occurred - change into OFF (FALSE) level.
True	On	Process alarm occurred - ON (TRUE) level.
False	Off	Process alarm occurred - OFF (FALSE) level.
Invalid	Err	Invalid (illegal) value.
Oscillate	Oscillate	Oscillating value.
HL	HL	Process alarm occurred - limit state of HL value.
VHL	VHL	Process alarm occurred - limit state of VHL value.
LL	LL	Process alarm occurred - limit state of LL value.
VLL	VLL	Process alarm occurred limit state of VLL value.
ToHL	ToHL	Process alarm occurred- value change into HL limit state.
ToVHL	ToVHL	Process alarm occurred- value change into VHL limit state.
ToLL	ToLL	Process alarm occurred - value change into LL limit state.
ToVLL	ToVLL	Process alarm occurred - value change into VLL limit state.
SwToTrans	SwToTrans	Process alarm occurred - change of quadrat value into Q_Trans value.
SwToOff	SwToOff	Process alarm occurred- change of quadrat value into Q_Off (FALSE) value.
SwToOn	SwToOn	Process alarm occurred- change quadrat value into Q_On (TRUE) value.
SwToError	SwToErr	Process alarm occurred - change of quadrat value into Q_Err value.
SwTrans	SwTrans	Process alarm occurred- quadrat value is Q_Trans.
SwOff	SwOff	Process alarm occurred - quadrat value is Q_Off.
SwOn	SwOn	Process alarm occurred - quadrat value is Q_On.
SwError	SwErr	Process alarm occurred - quadrat value is Q_Err.
ErrorWriteCmd	ErrWriteCmd	Error at the setting of output tags.
Sw_ErrorCmdOn	ErrCmdOn	Error during cm_SetSwitchOn command execution.
Sw_ErrorCmdOff	ErrCmdOff	Error during cm_SetSwitchOff command execution.
Sw_ErrorBkpCmdOff	ErrZalCmdOff	Error during cm_SetSwitchBkpOff command execution.
Change	Change	Process alarm occurred - change of integer or analog value.
SysPrAl	SysProcAlarm	Special type of process alarm used just for two objects of <a href="#">System variable</a> type - <a href="#">SystemError</a> and <a href="#">SystemWarning</a> .

## Value limits

Label in the system	Predefined label	Cause
Is_InLimit	InLimit	The object value is at once greater or equal to LL and less or equal to HL ( <b>LL&lt;=value&lt;=HL</b> ).
Is_VL_Limit	VL_Limit	The object value is less than VLL ( <b>value&lt;VLL</b> ).
Is_L_Limit	L_Limit	The object value is at once greater or equal to VLL and less than LL ( <b>VLL&lt;=value&lt;LL</b> ).
Is_H_Limit	H_Limit	The object value is at once greater than HL and less than VHL ( <b>HL&lt;value&lt;=VHL</b> ).
Is_VH_Limit	VH_Limit	The object value is greater than VHL ( <b>VHL&lt;value</b> ).
Is_LimitsProblem	LimitsProblem	In case of dynamic limits, there is the validity mismatch of the conditions: <b>VLL&lt;LL&lt;HL&lt;VHL</b> .

## Value states

Label in the system	Predefined label	Cause
s_val_Invalid	Invalid	Invalid object value.
s_pa_Alarm	ProcAlarm	The state is occurred in case that the given object has an active process alarm.
s_pa_NoAck	NoAckPAlarm	The state is occurred in case that the process alarm is not acknowledged by operator in process <a href="#">D2000 HI</a> .
s_pa_Blocked	PrAISilent	The state is occurred in case that the given object has not any active process alarm, or <b>Silent</b> option is enabled at configuration of object process alarms in the process <a href="#">D2000 CNF</a> .
s_val_Weak	Weak	Weak (suspicious) value is a value not valid in the system, because all the conditions of its validity are not met.
s_val_NoAck	NoAckValue	The state is occurred in case that the last object value change is not acknowledged by operator in process <a href="#">D2000 HI</a> .
s_val_Transient	Transient	Transient state of the value is occurred, if the command that sets the object value was executed, but backward reading has not yet verified the value setting.
s_val_Default	Default	Default state of the object value is occurred, if the I/O tag value gained by the process <a href="#">D2000 KOM</a> is replaced by other value - the control object value, or is manually set by operator in process <a href="#">D2000 HI</a> .
s_val_Manual	Manual	The object value is in Manual state, if it is manually set by operator in process <a href="#">D2000 HI</a> .
s_pa_Critical	PrAICrit	The status is occurred in case that the process alarm is defined as critical one in the process <a href="#">D2000 CNF</a> .
s_pa_Unknown	Unknown	

## Operator commands

Label in the system	Predefined label	Cause
cm_SetDefaultManual	SetDefMan	Manual setting of the object default value.
cm_SetDefaultAuto	SetDefAuto	Activation of the automatic mode of the object default value control. The default value in this mode will be copied the control object value.
cm_SetManual	SetManual	Manual setting of output object value.
cm_SetAuto	SetAuto	Activation of the automatic mode of the output object value control. The object value in this mode copies the control object value.
cm_SetDefaultOff	SetDefOff	Cancel the validity of the object default value.
cm_SetSwitchBlockAOn	SetBlockAOn	Activation of <a href="#">blockade A</a> of the switch.
cm_SetSwitchBlockAOff	SetBlockAOff	Deactivation of <a href="#">blockade A</a> of the switch.
cm_SetSwitchOn	SetSwitchOn	Switch on the switch.
cm_SetSwitchOff	SetSwitchOff	Switch off the switch.
cm_SetSwitchBkpOff	SetSwitchBkpOff	Backup switch off the switch.
cm_SetSwitchBlockBOn	SetBlockBOn	Activation of <a href="#">blockade B</a> of the switch.
cm_SetSwitchBlockBOff	SetBlockBOff	Deactivation of <a href="#">blockade B</a> of the switch
cm_SetSwitchNormalOff	SetSwitchNormalOff	Set the switch to the normal state - OFF.

cm_SetSwitchNormalOn	SetSwitchNormalOn	Set the switch to the normal state - ON.
cm_SetSwitchNormalNone	SetSwitchNormalNone	Set the switch to the normal state - NONE.

## Alarm commands

Label in the system	Predefined label	Cause
cm_AlarmKvit	Kvit	The alarm is acknowledged by operator.
cm_AlarmBlock	Block	The alarm is blocked by operator, or <b>Blocked alarm</b> option is enabled at its configuration in the process <a href="#">D2000 CNF</a> .
cm_AlarmUnblock	Unblock	The alarm is unblocked by operator.



### Related pages:

[Value representation methods in D2000 System](#)