

LonWorks


Communication line of LonWorks category

Supported types and device versions

A communication with LonWorks networks is implemented via the RNI interface of Echelon devices (SLTA, PCLTA, iLON-10, ...) with the help of the Windows system driver. The driver is installed together with "Echelon OpenLDV Installer" available on <http://www.echelon.com>. The communication was tested on the following interfaces:

- SLTA/10
- PCLTA/10
- iLON-10
- SmartServer 2.0 Controller
- U10 USB Network Interface

Communication line configuration

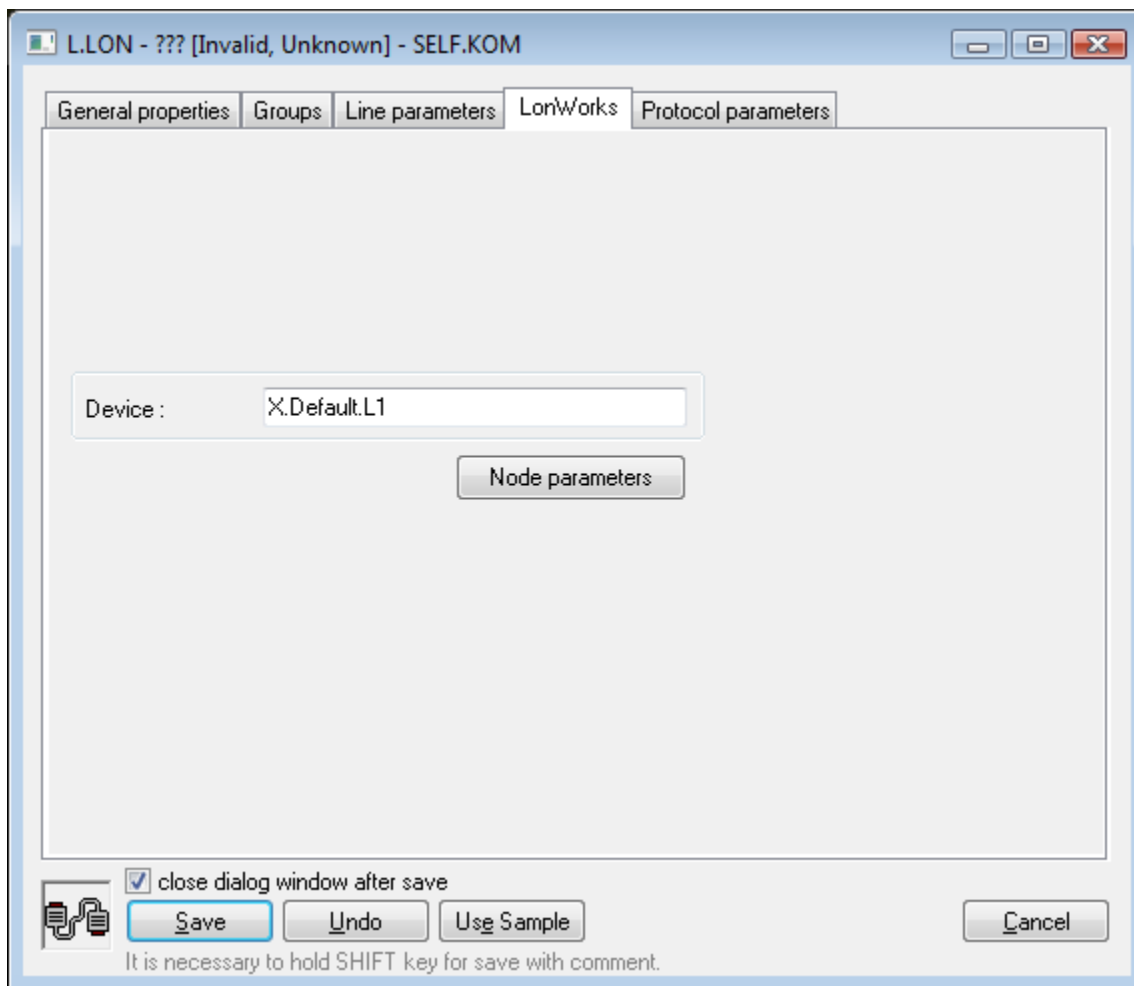


Device

Set a device name - e.g. LON1, LON2 up to LONx according to the driver configuration (older devices as SLTA, etc.) or the interface name configured in "Control Panel" -> "LonWorks Interfaces" in case of new devices as an iLON-10 driver, which is installed through the Echelon OpenLDV Installer.

The file *ldv32.dll* had to be copied into an installation directory of the D2000 System in case of older interfaces. OpenLDV Installer does not require this file.

Node address parameters configuration

Click on the button **Node parameters** in the tab **LonWorks** and the following dialog box opens. It allows editing the node address parameters.

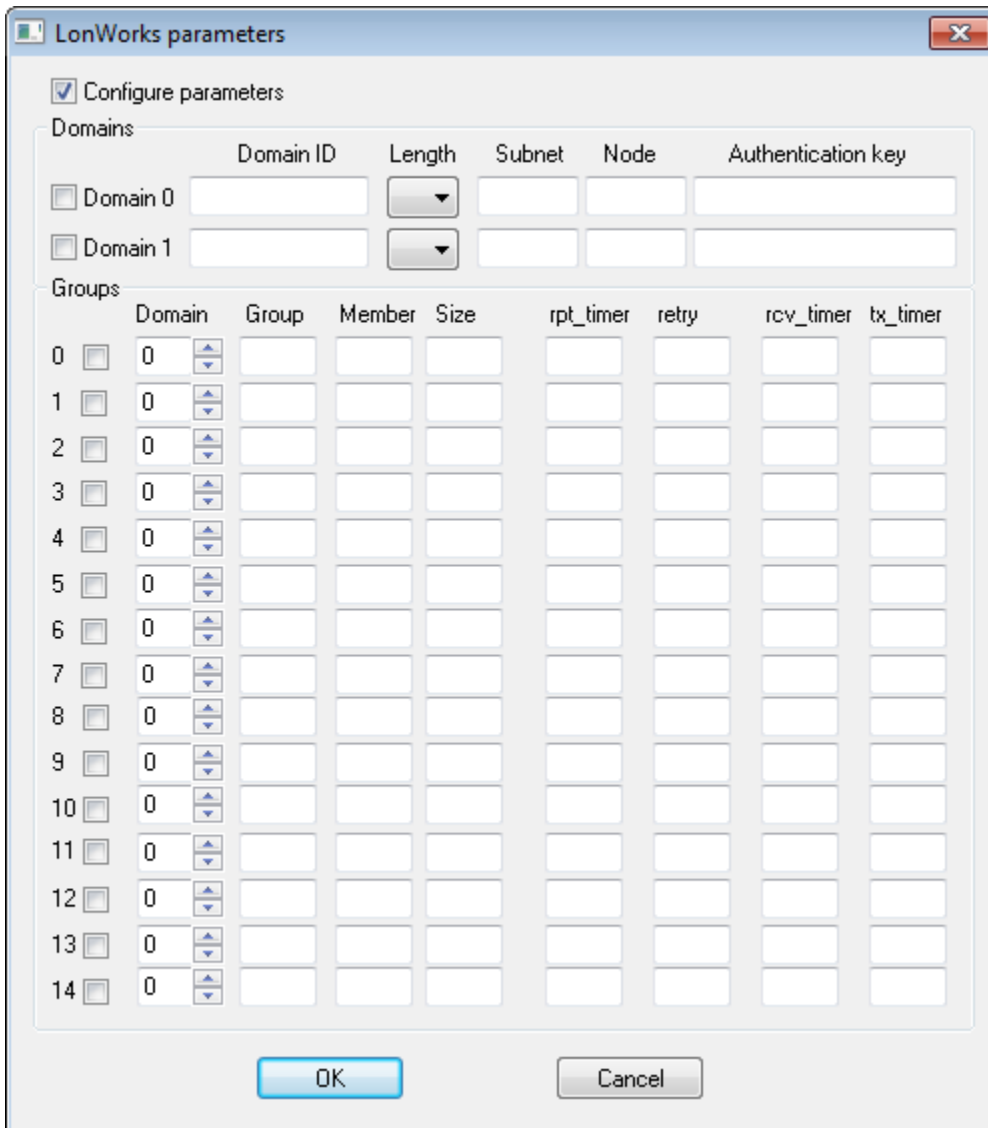

The dialog box is titled "LonWorks parameters" and has a close button (X) in the top right corner. It contains a checkbox labeled "Configure parameters" which is checked. Below this is a section for "Domains" with two rows: "Domain 0" and "Domain 1". Each row has a checkbox, a text field for "Domain ID", a dropdown for "Length", a text field for "Subnet", a text field for "Node", and a text field for "Authentication key". Below the domains section is a section for "Groups" which is a table with 15 rows (0 to 14). Each row has a checkbox, a "Domain" dropdown (all set to 0), a "Group" dropdown, a "Member" text field, a "Size" text field, and four timer text fields: "rpt_timer", "retry", "rcv_timer", and "tx_timer". At the bottom are "OK" and "Cancel" buttons.

Domains					
	Domain ID	Length	Subnet	Node	Authentication key
<input type="checkbox"/> Domain 0					
<input type="checkbox"/> Domain 1					

Groups									
	Domain	Group	Member	Size	rpt_timer	retry	rcv_timer	tx_timer	
0 <input type="checkbox"/>	0								
1 <input type="checkbox"/>	0								
2 <input type="checkbox"/>	0								
3 <input type="checkbox"/>	0								
4 <input type="checkbox"/>	0								
5 <input type="checkbox"/>	0								
6 <input type="checkbox"/>	0								
7 <input type="checkbox"/>	0								
8 <input type="checkbox"/>	0								
9 <input type="checkbox"/>	0								
10 <input type="checkbox"/>	0								
11 <input type="checkbox"/>	0								
12 <input type="checkbox"/>	0								
13 <input type="checkbox"/>	0								
14 <input type="checkbox"/>	0								

Check **Configure parameters** if you want to configure the node, otherwise, all the address parameters will not change.

Change of domain address parameters

The node will belong to the domain according to the parameters in the domain table. Choose **Domain 0** or **Domain 1**. The domain will be deactivated if you do not choose any of these options.

Domain table parameters:

- *Length* - Domain ID length (optional 0, 1, 3 or 6 bytes).
- *Domain ID* - a unique domain ID. It is a hexadecimal number with the length according to parameter *Length*. Do not set it if *Length* = 0 bytes. If *Length* = 1 byte, Domain ID is two hexadecimal characters, *Length* 3 bytes = 6 hexadecimal characters, and *Length* 6 bytes = 12 hexadecimal characters.
- *Subnet* - a subnet number, a decimal number ranging from 1 to 255.
- *Node* - a node number within the subnet, a decimal number ranging from 1 to 127.
- *Authentication key* - an authentication key used at optional authentication of the messages; it is the hexadecimal number with the length 6 bytes, i. e. 12 characters. If you do not use the authentication, set the number FFFFFFFF as an implicit key.

Note: An **Echelon NodeUtil** utility always manipulates with the **Domain 1** table to receive the broadcast messages.

Change of Group Address parameters

After checking the checkbox from 0 to 14, the node will belong to selected groups (Group Address).

Group address parameters:

- *Domain* - a domain index (0 or 1).
- *Group* - specifies group ID in the domain. It is a decimal number ranging from 0 to 255.
- *Member* - specifies member ID of the node in this group (a decimal number ranging from 0 to 63).
- *Size* - the group size (2 up to 64). The group size is unlimited when you set 0 (zero).
- *rpt_timer* - the decimal value 0 up to 15. This field specifies the time interval between repetitions of an outgoing message when unacknowledged–repeated service is used. See [Table 1](#) "Encoding of Timer Field Values".
- *retry* - the decimal value 0 up to 15. This field specifies the number of retries for acknowledged, request/response, or unacknowledged–repeated service (0–15). The maximum number of messages sent is one more than this number.
- *rcv_timer* - the decimal value 0 up to 15. When the node receives a multicast (group) message, the receive timer is set to the time interval specified by this field. If a message with the same transaction ID is received before the receive timer expires, it is considered to be a retry of the previous message. See [Table 1](#) "Encoding of Timer Field Values".
- *tx_timer* - the decimal value 0 up to 15. This field specifies the time interval between retries when acknowledged or request/response service is used. The transaction retry timer is restarted when each attempt is made, and also when any acknowledgment or response (except for the last one) is received. For the request/response service, the requesting node should take into account the delay necessary for the application to respond when setting the transaction timer. See [Table 1](#) "Encoding of Timer Field Values".

Table 1: Encoding of Timer Field Values (ms)

Value	rpt_timer	rcv_timer	tx_timer
0	16	128	16
1	24	192	24
2	32	256	32
3	48	384	48
4	64	512	64
5	96	768	96
6	128	1024	128
7	192	1536	192
8	256	2048	256
9	384	3072	384
10	512	4096	512
11	768	6144	768
12	1024	8192	1024
13	1536	12288	1536
14	2048	16384	2048
15	3072	24576	3072



Related pages:

[Communication lines](#)